

2006 Honda ACCORD

Submodel: EX | Engine Type: L4 | Liters: 2.4

Fuel Delivery: FI | Fuel: GAS

Radiator and Fan Replacement

1. Drain the engine coolant.
2. Remove the front bulkhead cover:
 - 2-door
 - 4-door
3. Remove the automatic transmission fluid (ATF) cooler hoses (A/T). Plug the ATF cooler hoses and lines.
4. Remove the upper radiator hose and the lower radiator hose from the radiator.
5. Disconnect the fan motor connectors and radiator fan switch connector ('03-04 models)/engine coolant temperature (ECT) sensor 2 connector ('05-07 models).
6. Remove the A/C compressor clutch connector.
7. Remove the upper bracket and cushions, then pull up the radiator.
8. Remove the fan shroud assemblies and other parts from the radiator.
9. Install the radiator in the reverse order of removal. Make sure the upper and lower cushions are set securely.
10. Fill the radiator with engine coolant, then bleed air from the cooling system.
11. Check the ATF level in the automatic transmission (A/T).

