



# INSTALLATION INSTRUCTIONS

Accessory

**HALF NOSE MASK  
P/N 08P35-S84-100H**

Application

**2002 ACCORD  
4-DOOR**

Publications No.


**A11 22957**

Issue Date


**AUG 2001**

## PARTS LIST


Nose mask

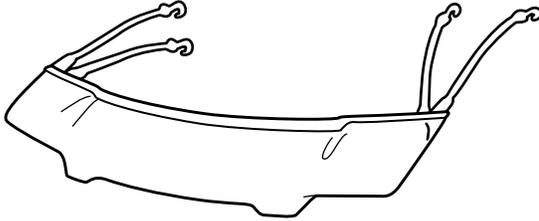

Right side mask

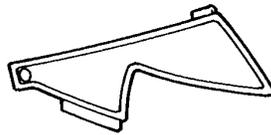

Left side mask

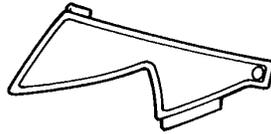

2 Snap-screws



2 Washers



2 Fenderwell nuts



## TOOLS REQUIRED

Stubby #2 Phillips screwdriver

Small flat-tip screwdriver


## INSTALLATION

### NOTE:

- Make sure the vehicle and the nose mask are clean and completely dry before installation. If moisture under the mask is allowed to dry, it may cloud the paint. If the mask gets wet, remove it and allow it to air-dry completely.
- Make sure any repainted surfaces are cured.
- Make sure the hood and nose of the vehicle have been waxed with a high-quality paste wax.
- Make sure you install the nose mask securely. If the nose mask starts to flap or comes loose while driving, safely pull off the highway, stop the vehicle, and secure or remove the mask.


### Installing the Hood Section

1. Open the hood and remove the two hood insulator clips. (Do not discard the insulator clips; they can be reinstalled if the mask is removed.)

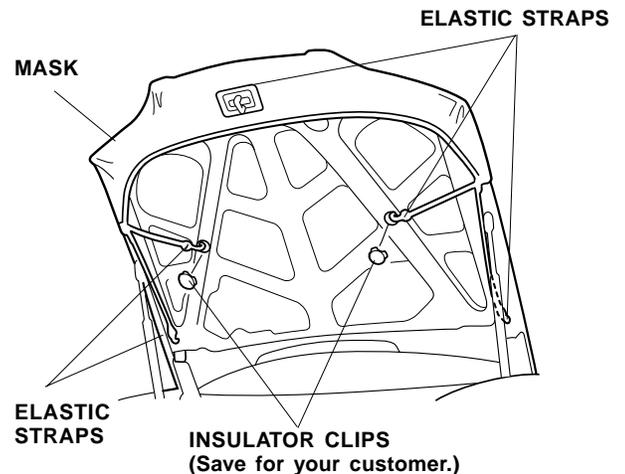


2. Fit the corners of the mask around the hood, and adjust the mask so it fits smoothly over the edges. Secure the mask by hooking the five elastic straps into the holes in the hood.

3. Turn the steering wheel all the way clockwise.
4. Pry out the plastic pin, and remove the expansion clip that holds the left inner fender to the fender; remove and retain the expansion clip, then clean the area around the hole.

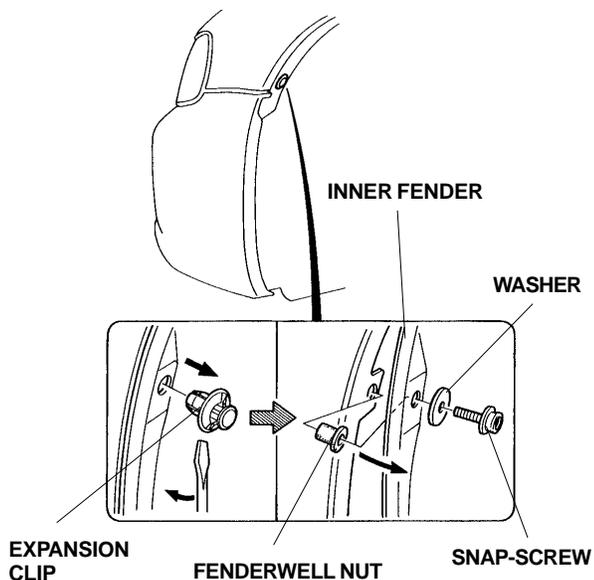


5. Pull away the inner fender, and press a fenderwell nut into the hole in the fender flange.
6. With its washer in place, securely tighten a snap-screw into the fenderwell nut.
7. Turn the steering wheel all the way counterclockwise, and repeat steps 4 through 6 for the right side.

8. Slip the pocket of the left side mask onto the corner of the left front fender, and attach the plastic hook to the top inside edge of the fender. Insert the tabs between the fender and the bumper.

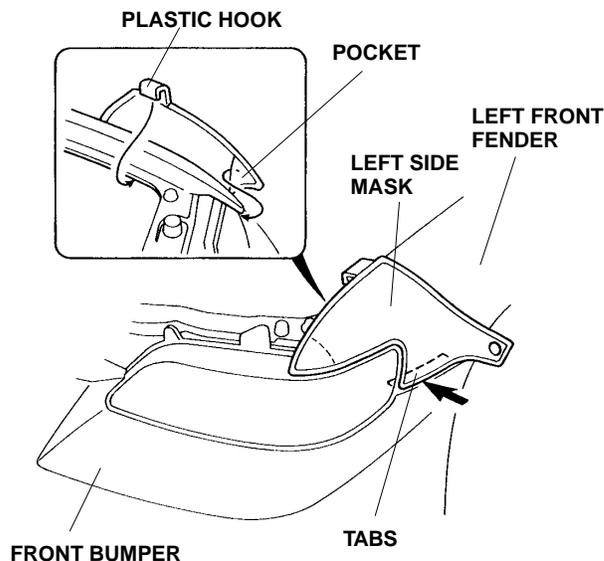

9. Pull the mask back toward the wheelwell, smooth out any wrinkles, and snap the mask onto the snap-screw.

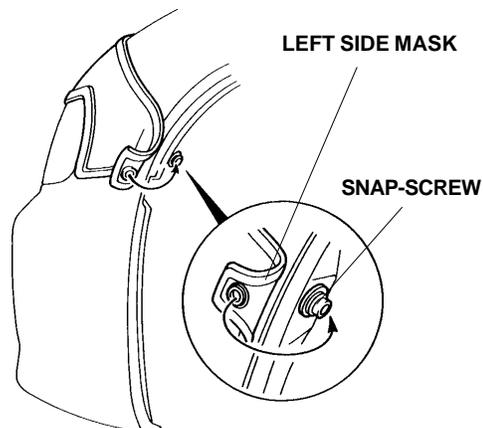

10. Repeat steps 8 and 9 to install the right side mask.
11. Put these instructions along with the expansion clips (removed in step 4) into the glove box for future use.

### CLEANING THE NOSE MASK

Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the vinyl and the flannel backing. Rinse the mask completely with clean water, and hang it to dry, out of direct sunlight. Make sure the mask is completely dry before you reinstall it.